

AFM


Architectural Fibreglass Mouldings Ltd

Globe Works, Richmond Street, Accrington, Lancashire. BB5 0RH

Tel: 01254 357000 Fax: 01254 357011



**FSW (Fixed Soffit) White
Over-Door Canopy**

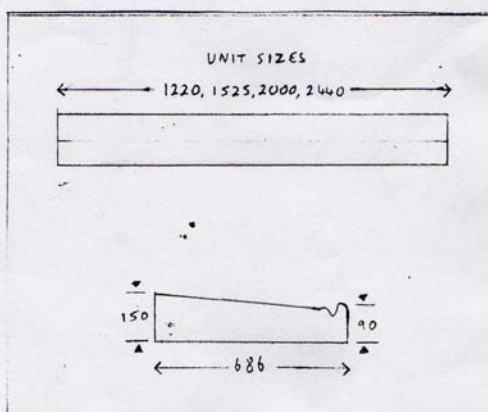

Fitting Instructions

The canopy comes as a complete unit which just slides over the brackets supplied to fix to the wall.

Two steel brackets are supplied with each canopy (one right hand and one left hand), these are fixed to the wall using two bolts in each bracket. When the brackets are fixed to the wall securely slide the canopy over the brackets to encapsulate them.

Two holes are pre-drilled at the back of each side of the canopy, these are your guide holes to drill through the brackets, pop rivets are used to secure and caps to cover.